

Adjusting the Font Size of Text

Reference Number: **KB-00183**

Last Modified: **March 24, 2023**

The information in this article applies to:





QUESTION

How do I change the size of the font used for my text?

ANSWER

In word programs, font size is measured in points which measure 1/72." In drafting programs such as Chief Architect, text character height is specified in plan inches.

To specify the font size of text

1. Using the **Select Objects**  tool, click on text object to select it, then click the **Open Object**  edit tool to open the **Rich Text Specification** or **Text Specification** dialog.


You can also adjust the font size of text in the Default Settings. To do so, navigate to Edit> Default Settings, expand the Text, Callouts, and

Markers category, click on either the Text or Rich Text option, then click Edit. In the Saved Defaults dialog that appears next, select a default from the list, then click Edit.

2. Adjust the **Character Height** value to your liking:


- For Rich Text, highlight the text in the dialog that you want to adjust the size of, then change the **Character Height** value.


In this example, we have specified the Character Height to be 6".

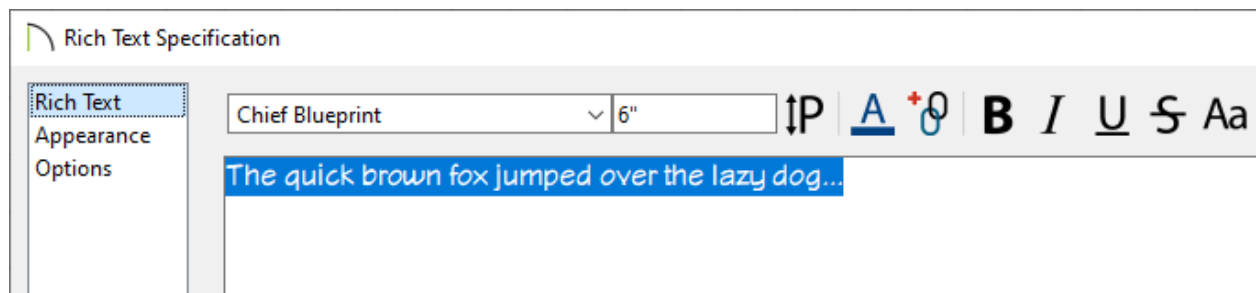

- For standard Text, navigate to the **TEXT STYLE** panel and either choose a Text Style to use, or select the **Use Custom Text Style** radio button to change the **Character Height** for this single Text object.


In this example, we have selected the Use Custom Text Style option and specified the Character Height to be 3".

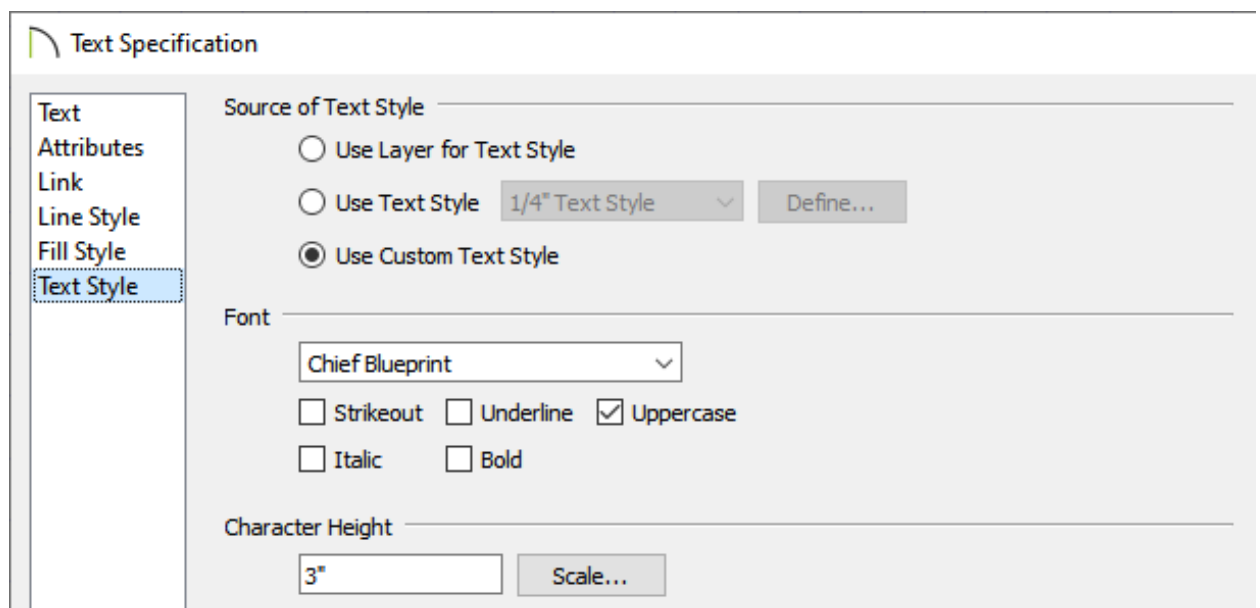



- To determine the height in drawing units that is needed to produce text of a specific size when printed, use the Print Size Calculator. This can be accessed by selecting the **Print Size**  button for Rich Text or the **Scale** button next to the Character Height field for standard Text.


3. Once all desired changes have been made, click **OK**.

Related Articles

 [Adding Arrows to Text \(/support/article/KB-00669/adding-arrows-to-text.html\)](/support/article/KB-00669/adding-arrows-to-text.html)

 [Adding Special Characters to Text \(/support/article/KB-00069/adding-special-characters-to-text.html\)](/support/article/KB-00069/adding-special-characters-to-text.html)

 [Creating and Using a Custom Text Style \(/support/article/KB-01325/creating-and-using-a-custom-text-style.html\)](/support/article/KB-01325/creating-and-using-a-custom-text-style.html)

 [Modifying the Text Styles of Labels \(/support/article/KB-00011/modifying-the-text-styles-of-labels.html\)](/support/article/KB-00011/modifying-the-text-styles-of-labels.html)

 [Setting up a Custom Default/Annotation Set \(/support/article/KB-01167/setting-up-a-custom-default-annotation-set.html\)](/support/article/KB-01167/setting-up-a-custom-default-annotation-set.html)



[\(https://chieftalk.chiefarchitect.com/\)](https://chieftalk.chiefarchitect.com/)

 [\(/blog/\)](/blog/)



[\(https://www.facebook.com/ChiefArchitect\)](https://www.facebook.com/ChiefArchitect)



[\(https://www.youtube.com/user/ChiefArchitectInc\)](https://www.youtube.com/user/ChiefArchitectInc)



[\(https://www.instagram.com/chiefarchitect/\)](https://www.instagram.com/chiefarchitect/)



[\(https://www.houzz.com/pro/chiefarchitect/\)](https://www.houzz.com/pro/chiefarchitect/)



[\(https://www.pinterest.com/chiefarchitect/\)](https://www.pinterest.com/chiefarchitect/)

[208-292-3400 \(tel:+1-208-292-3400\)](tel:+1-208-292-3400)

© 2000–2023 Chief Architect, Inc.

[Terms of Use \(/company/terms.html\)](/company/terms.html)

[Privacy Policy \(/company/privacy.html\)](/company/privacy.html)