# Controlling the Information that's Displayed in a Materials List

Reference Number: **KB-00510** Last Modified: **June 13, 2023** 

The information in this article applies to:



## QUESTION

When I create a materials list, a complete list of all the materials and objects in my plan file is created. How do I control what information displays in a materials list?

## ANSWER

The Materials List Defaults dialog allows you to control the categories and columns that are included in a Materials List before it's created. If you're using X14 or a prior version, you will instead want to access the Preferences dialog to make these same adjustments. If you have already created a Materials List, you can control this information using the Materials List Specification dialog.

In addition to these options, you can specify what layers are displayed in a Materials List, as well as change the structural member reporting method used for framing members.

- <u>To set up Materials List Defaults/Preferences</u>
- <u>To use the Materials List Specification dialog</u>
- <u>To control what is displayed in the Materials List using layers</u>
- To use the Structural Member Reporting Control drop-down

To set up Materials List Defaults/Preferences

 In your desired plan, navigate to Edit> Default Settings <sup>1</sup>/<sub>4</sub>, expand the Materials Lists category, select the Materials List option, then click Edit.

In X14 and prior versions, navigate to **Edit> Preferences F** from the menu on a Windows PC or **Chief Architect> Preferences P** on a Mac instead.

2. On the CATEGORIES panel of the **Materials List Defaults** dialog, uncheck the boxes beside any category that you do not wish to include in a Materials List when it is first created.

In X14 and prior versions, access the **M**ATERIALS **L**IST panel of the **Preferences** dialog that opens instead.

Materials List Defaults	×
Categories	Include These Categories
Columns Options Live List Appearance Report Appearance	Categories Accessories (AC) Appliance (A) Cabinets (C) Decks-Walks (DW) Doors (D) Electrical (E) Exterior Trim (EX) Fixtures (FX) Foundation (FO) Framing (F) Foundation (FO) Framing (F) General (GN) Hardware (H) Insulation (IN) Interior Trim (T) Landscaping (LS) Masonry (M) Roofing (R) Siding (S) Subfloor (SF) Wall Board (WB) Vindows (W) Select All Clear All
	OK Cancel Help

3. On the COLUMNS panel, uncheck the boxes beside the name of any Column that you do not wish to include in a Materials List when it is first created.

In X14 and prior versions, access the REPORT STYLE panel instead.



4. In X15 and newer versions, an **O**PTIONS panel is available, where you can specify the Layer Set used, the Structural Member Reporting method, as well as what floors and suppliers are displayed for Materials Lists.

Materials List Defaults	;			×
Categories Columns	Layer Set:	Materials List Layer Set	~	Define
Options Live List Appearance Report Appearance	Restrict to Floor:	All Floors	~	
	Restrict to Supplier:	Show All Suppliers	$\sim$	

5. Access the LIVE LIST APPEARANCE and REPORT APPEARANCE panels to adjust Grid, Color, and Font properties for Materials Lists.

n X14 and prior versions,	these settings are	located on the REPORT	STYLE panel.
---------------------------	--------------------	-----------------------	--------------

Materials List Defaults					×
Categories	Grid				
Columns		M Ho	orizontal Lines		
Options		🗹 Ve	rtical Lines		
Report Appearance		So So	lid Lines		
	Custom Co	ors			
	Header:				
	Header	Text:			
	Odd Rov	vs:			
	Even Ro	ws:			
	Text:				
	Font				
	Arial				~
	Font Size	e: 10	~		
		Bo	ld		
		🗌 Ita	lic		
		🗌 Ur	derline		
		Sto	ikeout		
	Restore Initial	Settings			
	Preview				
		Chief An 3D Hon	chitect Prer ne Design S	mier X15 Software	
			ОК	Cancel	Help

6. Make any other desired changes, then click **OK** and/or **Done** to close the dialog(s).

The Materials List Specification dialog lets you control what is included in a Materials List after it's created.

### To use the Materials List Specification dialog

- 1. In order to generate a Materials List, your plan should include at least one architectural object.
- 2. Select **Tools> Materials List> Calculate Materials for All Floors** from the menu to generate a Materials List for the entire plan.
- 3. In the Materials List window, select **Tools> Active View> Edit Active View** it o open the **Materials List Specification** dialog.
  - On the CATEGORIES panel, check the box beside each category that you would like to include in the current Materials List.
  - On the COLUMNS panel, check the box beside each column name that you wish to use. Click the **Move Up** and **Move Down** buttons to change the columns' order.
  - On the Options panel, you can specify the Layer Set used, the Structural Member Reporting method, as well as what floors and suppliers are displayed in the Materials List.
  - In X15 and newer versions, an Appearance panel is available, in which you can adjust the Grid, Color, and Font properties for the Materials List.

Layers that are associated with the plan file in which the Materials List was generated from can also be used to control what is displayed in the Materials List.

#### To control what is displayed in the Materials List using layers

1. Navigate to **Tools> Layer Settings> Display Options** 📝 from the menu.

2. Remove the checkmark from the Display column, or checkbox, to exclude all objects on that layer from being reported to the Materials List.

Layer Display Options	_		$\times$		
Layer Sets					
Materials List Laver Set V Copy Set.	🗌 Modit	fv All Laver	Sets		
		.,			
Reset Layer Names Delete Unused La	yers				
Properties for Selected Layer Set					
Name Filter:					
Name Disp	,		^		
Doors 🗸					
Doors, Labels					
Electrical 🗸					
Electrical, Connections 🗸					
Electrical, Labels					
Fences 🗸					
Fireplaces 🗸					
Fixtures, Exterior					
Fixtures, Interior	2				
Fixtures, Labels					
Floor Surfaces					
Footings 🗸					
Footings, Deck Post					
Footings, Post					
Footings, Step Markers			~		
Select All New Copy	Merge	Delet	te		
Properties for Selected Layer - "Fixtures, Interior"					
Display					
ОК	Cancel	Help	p		

3. Once all of your desired changes have been made, click **OK**.

The Materials List will update in real time to reflect the changes that were made.

You can also control the way framing members are reported in the Materials List.

#### To use the Structural Member Reporting Control drop-down

With the Materials List window active, use the Structural Member Reporting Control drop-down menu located near the top left corner to choose your desired reporting method for framing members.



You can also change the reporting method used for a Materials List by accessing the Options panel of the Materials List Defaults or Materials List Specification dialog.

- Select **Buy List** to calculate the framing materials by counting individual pieces and matching them to items in the list of Buy List Board Sizes.
- Select **Cut List** to calculate framing materials by counting the individual pieces present in the model.
- Select Linear Length to calculate framing materials in linear feet.
- Select **Mixed Reporting** to calculate framing materials using a combination of lineal lengths and piece counts.

**Related Articles** 

Adjusting How Objects are Reported to the Materials List (/support/article/KB-00098/adjusting-how-objects-are-reported-to-the-materials-list.html)

Creating a Cut or Buy List of Framing Materials (/support/article/KB-00095/creating-acut-or-buy-list-of-framing-materials.html)

►
(https://chieftalk.chiefarchitect.com/)
☑ (/blog/)

 Image: Contrast of the service of