Deleting Unused Layer Sets

Reference Number: **KB-00167** Last Modified: **July 20, 2021**

The information in this article applies to:



QUESTION

I have a large number of layer sets in my plan that I would now like to delete. How can I delete them?

ANSWER

Layer sets can be deleted from a plan file by accessing the Layer Set Management dialog.

Deleting layer sets

- 1. **Open** the plan that you would like to delete layer sets from.
- 2. From the menu, select **Tools> Layer Settings> Layer Set Management**
- 3. Highlight the layer set you want to delete and click the **Delete** button to delete it from the current file.

All Layers OFF	Define
All Layers ON	New
Working Layer Set	
3D Framing Layer Set	Copy
Camera View Layer Set	
Custom Layer Set	Rename
Detail Layer Set	Delete
Electrical Layer Set	Delete
Floor Plan Shall I aver Set	Import
From Francisco F	
Framing Ceiling Laver Set	Export
Framing, Cening Layer Set	
Framing, Roof Laver Set	
HVAC Laver Set	
Kitchen and Bath Elevation Laver Set	
Kitchen and Bath Laver Set	
Plot Plan Laver Set	
Reference Display Laver Set	
Roof Plan Layer Set	
Section View Layer Set	
ctive Layer Set For Current View	
Working Layer Set \lor Define	

If the Delete button is grayed out, the selected layer set cannot be deleted.

You cannot delete the active layer set or any layer set specified in the Default Settings.

Related Articles

Modifying the Layers that Display on a View Sent to Layout(/support/article/KB-00644/modifying-the-layers-that-display-on-a-view-sent-to-layout.html)

> > A

