Deleting Objects From a Plan or Layout

Reference Number: **KB-00196**Last Modified: **July 16, 2021**

The information in this article applies to:



QUESTION

How can I delete specific components from my files, such as base cabinets from a single room, all of the automatic dimensions on all floors, or text that may be located on a specific layout page?

ANSWER

The Delete Objects tool can be used in a plan file to delete entire categories of objects for a single room, for all rooms on a given floor level, or for all floor levels in an existing plan. It will not, however, delete CAD objects or schedules drawn in cross section/elevation views or CAD details.

Starting in X13, The Delete Objects tool can also be used to delete content from one or more layout pages.

Additionally, objects can be deleted by tapping the Delete key on your keyboard or by selecting the Delete tool from the Edit menu while an object is selected.

To use the Delete Objects tool in a plan

- 1. Select **Edit> Delete Objects** from the menu.
- 2. In the **Delete Objects** dialog that displays, select the appropriate option under **Delete Scope** and check the appropriate boxes next to the categories you wish to delete.

Delete Objects		×
The series objects		
Delete Scope		_
All Floors	On This Floor Single Room	Select All Clear All
Objects		
Added Lighting	Doors	Piers
Architectural Blocks	Dormers	Plants
Cabinets, Base	☐ Electrical	Polyline Solid
Cabinets, Full Height	Fireplaces	Roof Planes
Cabinets, Shelves/Partitions	Fixtures	Roof Baseline Polylines
Cabinets, Soffits	Furniture	Slab Surfaces
Cabinets, Wall	Geometric Shapes	Stairs/Ramps/Landings
Cameras, Saved	Hardware	Terrain Objects
Corner Boards/Quoins	☐ Images/Billboards	Windows
Custom Ceilings	Millwork	Wall Hatching
Custom Countertops		
CAD —		
CAD	Dimensions, Automatic	Pictures
Text	Dimensions, Manual	PDF
Construction Lines		
Framing		
✓ Bearing Line	✓ Joist Direction Line	✓ Roof Framing
✓ Ceiling Framing	✓ Floor Framing	✓ Wall Framing
✓ Deck Framing	✓ Roof Trusses	✓ Other Framing
☐ Schedules		
Cabinet Schedules	Framing Schedules	Room Finish Schedules
Door Schedules	Furniture Schedules	Wall Schedules
Electrical Schedules	☐ Note Schedules	Window Schedules
Fixture Schedules	Plant Schedules	Custom Schedules
☐ Walls		
Foundation Walls	Pony Walls	Railing
Fencing	Room Dividers	Retaining Walls
Other Walls		
	Delete	Cancel Help

• Choose **Single Room** to delete objects only in rooms on the current floor that you specify, choose **All Rooms on This Floor** to delete objects in all rooms on the


current floor, or choose **All Floors** to delete objects on all floors in the plan.

- Check the box beside any heading to select all of the categories within it; clear the box beside a heading to deselect all of its categories.
- Click the Select All button to check the boxes beside all of the categories or click the
 Clear All button to uncheck the boxes beside all of the categories.
- 3. With the dialog still open, click in a room or area in your plan to delete objects from the selected categories, or select the **Delete** button at the bottom of the dialog.

To use the Delete Objects tool in a layout*

*Applies to X13 and newer program versions.

- 1. From a layout file, select **Edit> Delete Objects** from the menu.
- 2. In the **Delete Objects** dialog that displays, select the appropriate option under **Delete Scope** and check the appropriate boxes next to the categories you wish to delete.

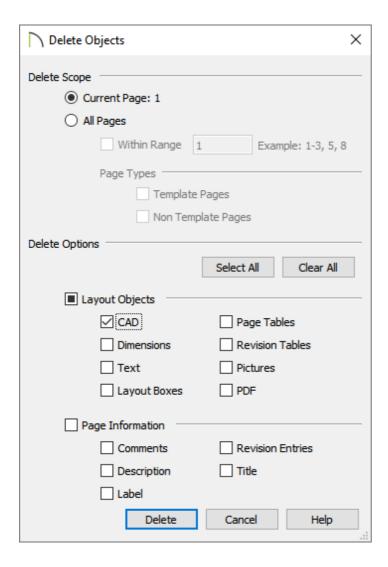

- Choose Current Page to delete objects from the current layout page or choose the All Pages option to delete content from either all pages, or from a specific range of pages.
- Check the box beside any heading to select all of the categories within it; clear the box beside a heading to deselect all of its categories.
- Click the Select All button to check the boxes beside all of the categories or click the
 Clear All button to uncheck the boxes beside all of the categories.
- 3. With the dialog still open, click in the layout to delete objects from the selected categories, or select the **Delete** button at the bottom of the dialog.

To use the Delete tool

1. Using the **Select Objects** \(\sqrt{\text{tool}}\) tool, click on an object or a selection of objects you wish to delete from your plan.

2. With the object(s) selected, navigate to **Edit> Delete** if from the menu or tap the Delete key on your keyboard.

Related Articles



(https://chieftalk.chiefarchitect.com/)

(/blog/)

(https://www.facebook.com/ChiefArchitect)

O

(https://www.youtube.com/user/ChiefArchitectInc)

0

(https://www.instagram.com/chiefarchitectsoftware/

(https://www.houzz.com/pro/chiefarchitect/)

@

(https://www.pinterest.com/chiefarchitect/)

208-292-3400 (tel:+1-208-292-3400)

© 2000–2021 Chief Architect, Inc.

Terms of Use (/company/terms.html)

Privacy Policy (/company/privacy.html)