Adding and Removing Roof Gutters

Reference Number: **KB-00675** Last Modified: **July 19, 2021**

The information in this article applies to:





How do I apply a gutter profile to the roof in my plan?



ANSWER

The Library Browser includes a selection of gutter profiles that can be applied to both automatically generated and manually drawn roofs.

To add or remove gutters from all roof planes

1. Select **Build> Roof> Build Roof** from the menu.

If you have modified roof planes manually and don't want to rebuild the entire roof, you can instead group select your roof planes and open them all up to specification by selecting the **Open Object** cell edit button. To learn how to group select roof planes, please see the article "Group Selecting Objects" in the <u>Related Articles</u> section below.

2. On the **GUTTER** panel of the **Build Roof** or **Roof Plane Specification** dialog that opens:

N Build Roof								×
Roof Options Structure Rafter Tails Ridge Caps Gutter Frieze Shadow Boards Arrow Materials Roof Styles	Molding Profiles	Width 4"	Height 3"	Repeat Distance N/A		Vertical Offset 0"		Add New Replace Default Delete Make Stack Explode Stack Add to Library
	Retain Aspect Ratio Selected Profile Options	Count	Componer	nts in Materi	ials List		Def	ault Gutter

- Select the current gutter molding profile if one is present, and click the **Replace** button.
 - If a gutter molding profile is not present, select the **Add New** button.

If you'd like to delete the gutter, select it and click **Delete**.

• If you're replacing or adding a gutter molding profile, a **Select Library Object** will open, in which you can then search or browse for one that suits your needs. Once your desired gutter molding profile is chosen, click **OK**.



You can also create your own custom gutter molding profile. To learn more, please see article "Drawing a Custom Gutter Molding Profile" in the <u>Related Articles</u> section below.

 Make any additional modifications to the gutter molding profile such as the Width, Height, and Offsets.

You can also check the **Retain Aspect Ratio** checkbox if you'd like the gutter profile to retain the aspect ratio when either the Width or Height is modified.

gutter molding profile that you selected, then click the **Select Material** button.

- In the **Select Material** dialog, browse the library for a material that you'd like to use for the gutters.
- Once a desired material is chosen, click **OK**.
- 4. On the ROOF panel, place a check in the box beside **Build Roof Planes**.

If you instead group selected and opened your roof planes up to specification, skip this step.

- 5. Click **OK** to confirm the changes and close the dialog.
- 6. To confirm that your selected gutter molding profile has been applied or removed, select **3D> Create Orthographic View> Backclipped Cross Section** and click and drag a camera arrow running parallel to the roof plane eaves with gutters so that the profile can been viewed.



Note: The settings located in the Build Roof dialog, including the gutter profile, will be applied when you manually draw roof planes going forward, as well as when you build a roof automatically.

To add or remove a gutter from an individual roof plane or edge

- 1. Using the **Select Objects** tool, click on the edge of a roof plane that you'd like to add or remove a gutter to/from, and then click on the **Open Object** click button.
- 2. On the GUTTER panel of the **Roof Plane Specification** dialog that opens:

☐ Roof Plane Spec	ification							×
General Options Structure Rafter Tails Ridge Caps Gutter Frieze Shadow Boards Polyline Selected Line Line Style Fill Style Materials Arrow Label	Gutter On Selected Edg Automatic (On Molding Profiles Name CRG 1	(On) Width	_	Repeat Distance N/A		Vertical Offset 0"	То Тор	Add New Replace Default Delete Make Stack Explode Stack
	Retain Aspect Ratio	s	omponent	s in Materia	ls List			Add to Library

• Under the Gutter On Selected Edge heading, select the **Automatic (On/Off)** option to use the default behavior that is set within the **Build Roof** dialog.

Select the **On** option to always display the specified gutter molding profile for this edge of the roof plane.

Select the **Off** option to remove the gutter molding profile from this selected edge.

The ability to adjust the gutter for each individual roof edge is only available in Chief Architect Premier X11 and newer program versions.

• To add, remove, or replace the gutter molding profile for all edges of the opened roof plane, choose the **Add New**, **Replace**, or **Delete** button.

In Chief Architect X10 and prior program versions, the gutter can be turned on/off for each individual roof plane by selecting the **OPTIONS** panel, and checking/unchecking the **Gutter** box.

• Once all desired changes have been made, click **OK** to close the dialog.

Related Articles

Drawing a Custom Gutter Molding Profile (/support/article/KB-00677/drawing-a-customgutter-molding-profile.html)

Group Selecting Objects (/support/article/KB-00623/group-selecting-objects.html)



Privacy Policy (/company/privacy.html)